 
 


# IRONGUARD FLAT TOP FENCE

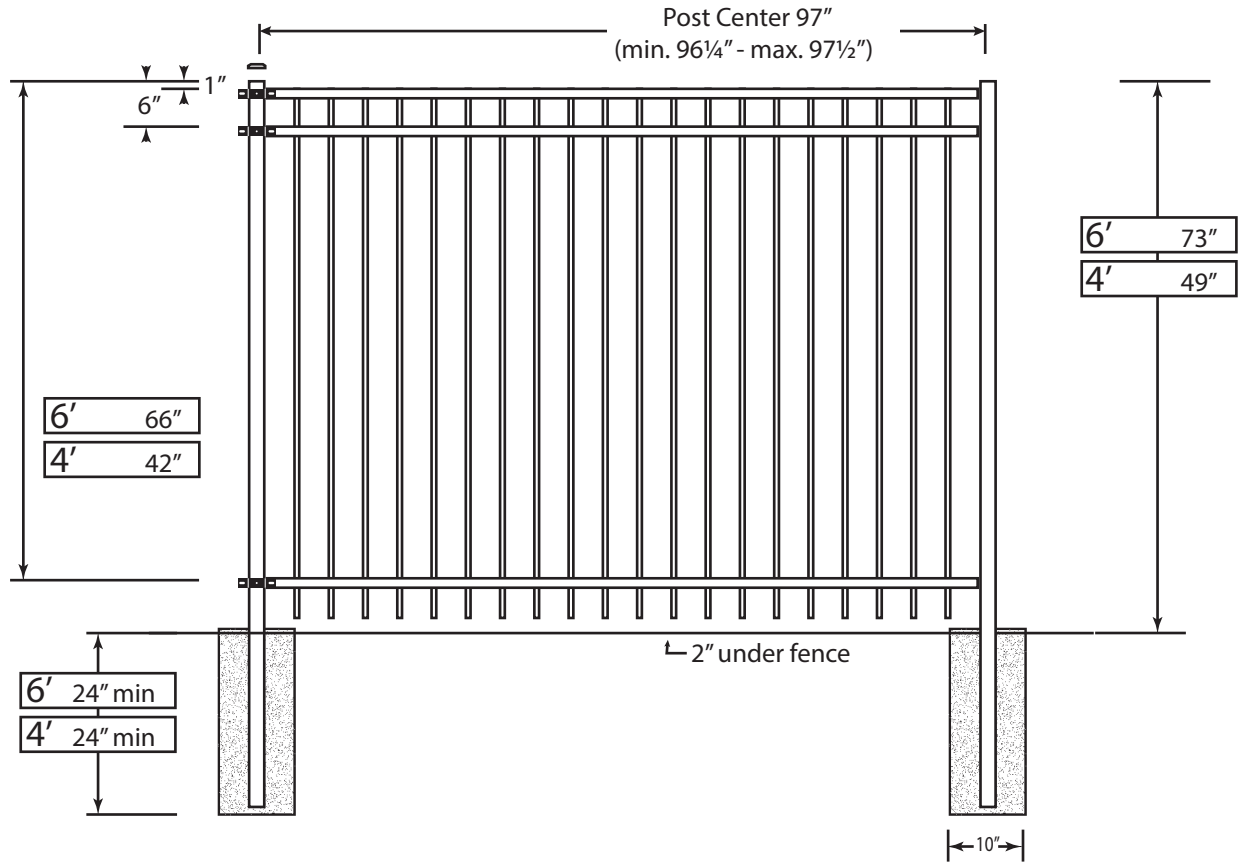

## CUTTING A PANEL:

Use a saws-all or hack saw to cut the panel to length. Drill new holes with a 3/8" drill bit. Use touch up paint on cuts and drill holes. Bolt cut panel same as full length panel.

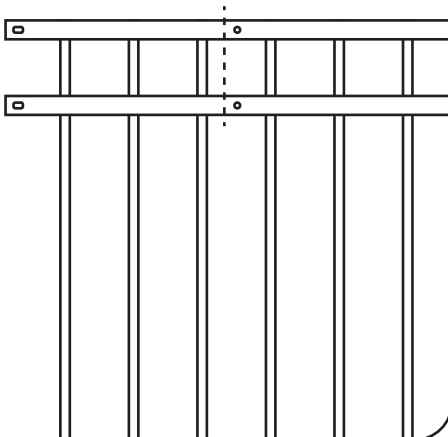

Gate Post Spacing	Panel Size	Opening Between Posts	Gate Posts on Center
Standard Panel	48-5/8"	50-1/4"	52-1/4"
Large Panel	57-5/8"	59-1/4"	61-1/4"
(adjustability ± 3/4")			
2 Standard Panels		97 -3/4"	99-3/4"
2 Large Panels		115-3/4"	117-3/4"
1 Standard & 1 Large Panel		106-3/4"	108-3/4"
(adjustability ± 1-1/4")			