


TREX SECLUSIONS (NEW)

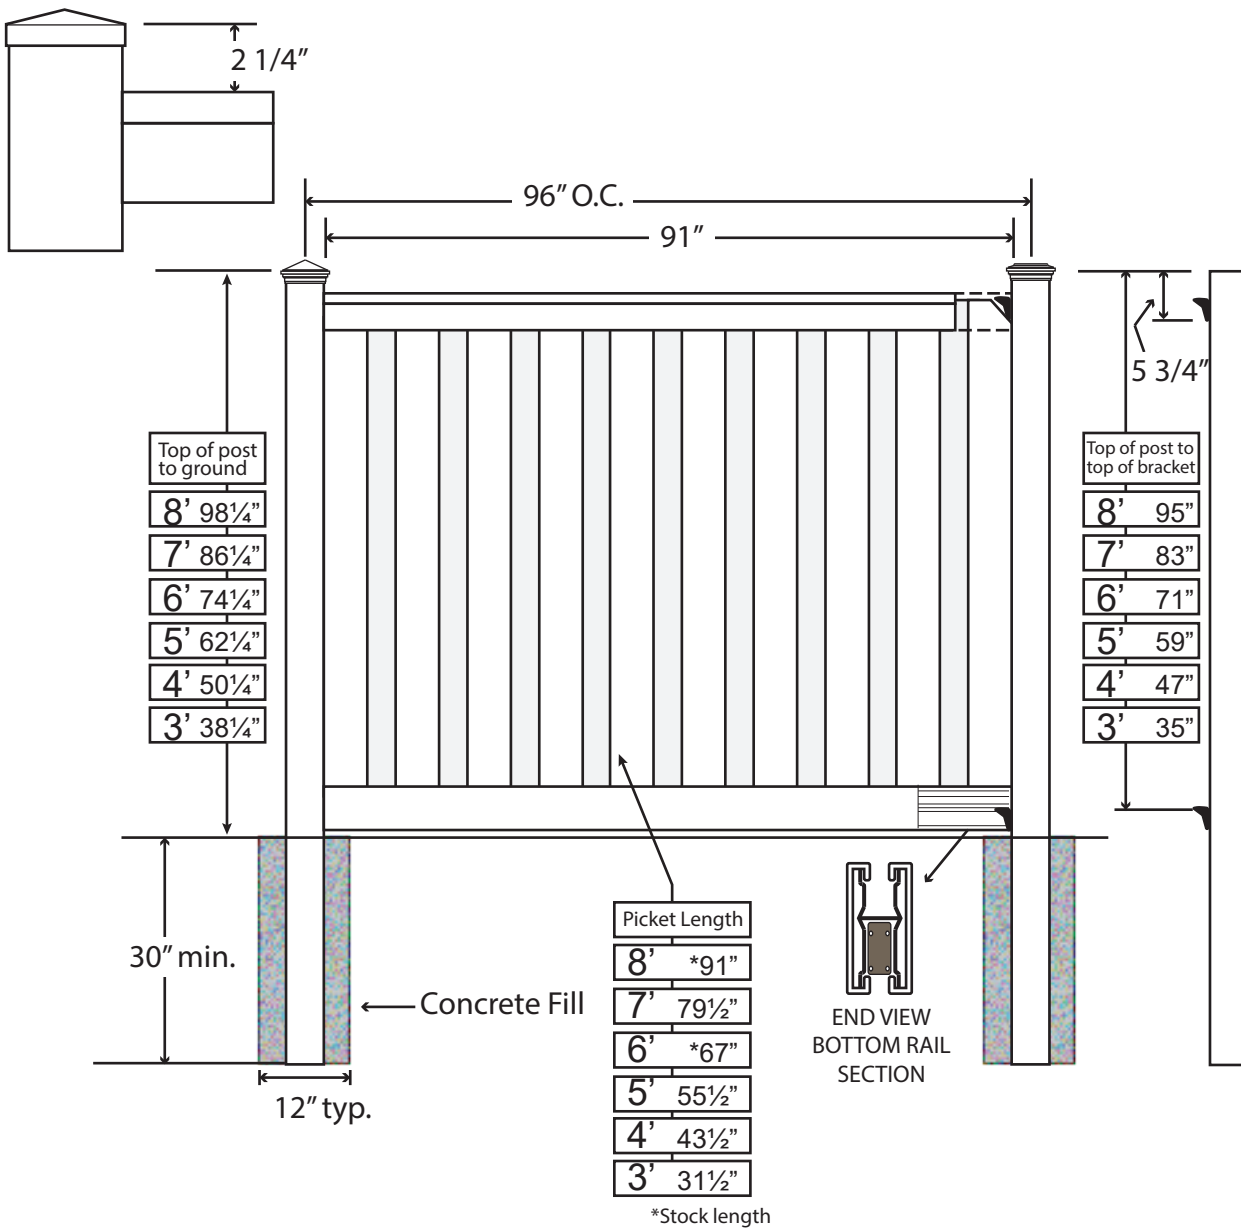

GATE POSTS:



The steel Trex Fence Post Insert should go into the post prior to setting the gate post.

The opening of the steel insert should face toward the fence brackets and away from the gate.

Allow 12" of steel to extend beyond the bottom of the Trex post. Screw in a self-tapping screw about 6" up from the bottom of the post to secure the steel insert in the post.

If the gate post is to be a stand-alone post, a 4-sided Heavy Post Insert should be used.

Gate Post Spacing	Panel Size	Opening Between Posts	Gate Posts on Center
Standard Panel	44-3/8"	46-1/4"	51-1/4"
Large Panel	63-7/8"	65-3/4"	70-3/4"
2 Standard Panels	44-3/8"	91-1/2"	96-1/2"
2 Large Panels	63-7/8"	130-1/2"	135-1/2"
1 Standard & 1 Large Panel		111"	116"



Slope Adjustment	
Drop in 4 ft	Max. Centers
0"	96"
6"	94 1/4"
12"	91 1/2"
18"	88"
24"	83 5/8"



Transitions	
Drop	Max. Centers
0"	96"
12"	94"
24"	90 3/4"
36"	85 1/2"
48"	78 3/4"